

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
15	REAR DOOR LOCKING WARNING LIGHT
101	CIGARETTE LIGHTER
103	ALTERNATOR
104	STARTING SWITCH
105	MAIN ELECTROMAGNETIC HORN
107	BATTERY
108	IGNITION COIL
110	ANTI-LOCK BRAKING SYSTEM PRESSURE UNIT HOUSING
118	ANTI-LOCK BRAKING SYSTEM COMPUTER
119	AUTOMATIC TRANSMISSION COMPUTER
120	INJECTION COMPUTER
123	CENTRAL DOOR LOCKING CONTROL
125	HAZARD WARNING LIGHT CONTROL
128	HEATED REAR WINDOW CONTROL
129	GEAR SELECTOR CONTROL
132	DRIVER'S SIDE ELECTRIC WINDOW CONTROL
133	PASSENGER'S SIDE ELECTRIC WINDOW CONTROL
134	ELECTRIC REAR-VIEW MIRROR CONTROL
138	REAR RIGHT DOOR ELECTRIC LOCKING
139	REAR LEFT DOOR ELECTRIC LOCKING
140	DRIVER'S DOOR ELECTRIC LOCKING
141	CENTRAL LOCKING FOR PASSENGER DOOR
142	BOOT LID ELECTRIC LOCKING
145	COMBINED WIPER-WASHER
146	PINKING SENSOR 1
147	ATMOSPHERIC PRESSURE SENSOR
149	TDC SENSOR
150	RIGHT REAR WHEEL SENSOR
151	LEFT REAR WHEEL SENSOR
152	RIGHT FRONT WHEEL SENSOR
153	LEFT FRONT WHEEL SENSOR
154	TAILGATE SWITCH
155	REVERSING LIGHTS SWITCH
156	HANDBRAKE SWITCH
160	BRAKE SWITCH
161	PASSENGER GLOVEBOX SWITCH
163	STARTER
164	COLD AIR BLOWER
165	LUGGAGE COMPARTMENT LIGHTING
168	GLOVE COMPARTMENT LIGHT
169	EGR SOLENOID VALVE
171	AIR CONDITIONING CLUTCH
172	RIGHT REAR LIGHT
173	LEFT REAR LIGHT
176	RIGHT FRONT FOGLIGHT
177	LEFT FRONT FOGLIGHT
178	RIGHT REAR RABBET SWITCH
179	LEFT REAR RABBET SWITCH
180	DRIVER'S RABBET SWITCH
181	PASSENGER'S RABBET SWITCH
188	COOLING FAN UNIT
189	RIGHT REAR SPEAKER
190	LEFT REAR SPEAKER

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
191	FRONT RIGHT DOOR SPEAKER
192	FRONT LEFT DOOR SPEAKER
193	INJECTOR 1
194	INJECTOR 2
195	INJECTOR 3
196	INJECTOR 4
199	FUEL GAUGE
200	REAR SCREEN DE-ICING
203	DRIVER'S WINDOW MOTOR
204	PASSENGER ELECTRIC WINDOW MOTOR
205	PRESSURE SWITCH
207	BRAKE FLUID MIN LEVEL SENSOR
209	MONOLEVER
211	REAR SCREEN WIPER MOTOR
212	WINDSCREEN WIPER MOTOR
213	FRONT COURTESY LIGHT
214	REAR RIGHT-HAND COURTESY LIGHTS
215	REAR LEFT-HAND COURTESY LIGHTS
219	HEADLIGHT WASHER PUMP
222	THROTTLE POTENTIOMETER
224	POWER ASSISTED STEERING PRESSURE SWITCH
225	DIAGNOSTIC SOCKET
226	RIGHT-HAND HEADLIGHT
227	LEFT-HAND HEADLIGHT
231	FRONT FOG LIGHTS RELAY
232	STARTER RELAY
233	COLD AIR BLOWER RELAY
234	FAN ASSEMBLY RELAY
235	HEATED REAR SCREEN RELAY
236	FUEL PUMP RELAY
238	INJECTION LOCKING RELAY
239	DRIVER'S ELECTRIC REAR-VIEW MIRROR
240	PASSENGER ELECTRIC REAR-VIEW MIRROR
241	LIGHTING DIMMER
242	DOWNSTREAM OXYGEN SENSOR
243	OIL LEVEL SENSOR
244	WATER INJECTION TEMPERATURE SENSOR
245	EXTERNAL TEMPERATURE SENSOR
247	INSTRUMENT PANEL
250	VEHICLE SPEED SENSOR
255	RIGHT FRONT TURN SIGNAL LIGHT
256	LEFT FRONT TURN SIGNAL LIGHT
257	PREHEATING UNIT
261	RADIO
262	COOLING FAN AND AIR CONDITIONING
267	RIGHT REPEATER
268	LEFT REPEATER
272	INJECTION AIR TEMPERATURE SENSOR
273	ENGINE SPEED SENSOR
288	RUNNING LIGHT MAIN RELAY
289	RUNNING LIGHT WATCHDOG RELAY
290	RUNNING-LIGHT CODED RELAY
304	SUNROOF

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
311	COURTESY LIGHT TIMER
317	SUNROOF CONTROL
318	CARBURETTOR BASE RESISTANCE
319	AIR CONDITIONING CONTROL PANEL
320	BASE FAN ASSEMBLY AND AIR CONDITIONING
321	AIR CONDITIONING FAN ASSEMBLY RESISTOR
322	AIR CONDITIONING AND POWER ASSISTED STEERING LED
325	RADIO SATELLITE CONTROL
333	DRIVER'S SEAT BELT SWITCH
365	RIGHT-HAND TWEETER SPEAKER
366	LEFT-HAND FRONT TWEETER SPEAKER
371	PETROL VAPOUR ABSORBER
385	DRIVER'S HEATED SEAT
386	PASSENGER HEATED SEAT
398	EGR SOLENOID VALVE
414	WATER IN DIESEL SENSOR
418	PASSENGER COMPARTMENT TEMPERATURE SENSOR FAN
419	AIR CONDITIONING CONTROL UNIT
420	MIXING FLAP
449	DIESEL FUEL HEATER RESISTOR
469	MONITOR CONTROL
474	AIR CONDITIONING COMPRESSOR CONTROL RELAY
475	RECYCLING MOTOR
485	MULTIFUNCTION SWITCH
502	VARIABLE POWER ASSISTED STEERING COMPUTER
503	DECODER COMPUTER
523	DRIVER'S DOOR LIGHT
524	FRONT PASSENGER DOOR LIGHT
529	CENTRAL COURTESY LIGHT
532	DRIVER'S CONTROL FOR FRONT PASSENGER WINDOW CLOSER
537	LEFT HEADLIGHT CORRECTOR MOTOR
538	RIGHT HEADLIGHT CORRECTOR MOTOR
540	VARIABLE POWER ASSISTED STEERING MOTOR
541	COURTESY MIRROR LIGHT
562	HEADLIGHT ADJUSTMENT CONTROL
565	THROTTLE BODY
583	STEERING WHEEL ANGLE SENSOR
588	DRIVER'S COURTESY MIRROR LIGHT
597	ENGINE AND RELAY FUSE BOX
602	REVERSING LIGHTS RELAY
627	CRUISE CONTROL SWITCH
639	RAISED BRAKE LIGHT
645	PASSENGER COMPARTMENT COMPUTER
653	CLOCK/EXTERNAL TEMPERATURE/CARPHONE DISPLAY ASSEMBLY
662	NAVIGATION COMPUTER
675	CLUTCH PEDAL SWITCH
677	FRONT AND REAR BI-DIRECTIONAL WASHER PUMP
679	RADIO INTERFERENCE SUPPRESSOR
680	PREHEATER PLUG 1
681	PREHEATER PLUG 2
682	PREHEATER PLUG 3
683	PREHEATER PLUG 4
689	CRUISE CONTROL AND AIR BAG SWITCH

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
692	CAR PHONE CLUSTER
693	CAR PHONE SPEAKER
700	PERCOLATION FAN LOW SPEED RELAY
703	ELECTRIC WINDOW RELAY
711	DIESEL PUMP
721	ANTI-LOCK BRAKING SYSTEM COMPUTER + ANTI-LOCK BRAKING SYSTEM HYDRAULIC UNIT
724	AUTOMATIC CLUTCH PUMP UNIT
738	INJECTOR NEEDLE LIFT SENSOR
746	CYLINDER SENSOR
753	HEADLIGHT WASHER PUMP RELAY
754	HYDRAULIC ELECTRIC INTERFACE
755	TRACTION CONTROL SWITCH
756	AIR BAG/PRE-TENSIONER COMPUTER
757	DRIVER'S PRE-TENSIONER
758	PASSENGER'S PRE-TENSIONER
762	GEARBOX PUMP ASSEMBLY RELAY
777	POWER SUPPLY FUSE BOARD
778	QUADRUPLE IGNITION COIL MODULE
780	AUTOMATIC TRANSMISSION VEHICLE SPEED SENSOR
781	RELATIVE PRESSURE SENSOR (AUTOMATIC GEARBOX)
784	COMMAND RELAY BLOCK 2
789	HANDS-FREE MOBILE PHONE MICROPHONE
798	DUAL MODE SOLENOID VALVE
799	INJECTION AIR FLOW METER
802	ECU ANTI-RETURN DIODE / FUEL PUMP RELAY
845	NO. 2 PASSENGER AIR BAG
850	POWER ASSISTED STEERING TORQUE SENSOR
853	+ AFTER IGNITION/+BEFORE IGNITION RELAY
887	UPSTREAM OXYGEN SENSOR
896	TWIN-MODE MOTOR REDUCER
898	ADDITIONAL HEATER PLUG
921	ACCELERATOR POTENTIOMETER
927	IMPACT SENSOR (INERTIA SENSOR)
971	"DP0" AUTOMATIC GEARBOX MODULE
972	CARMINAT KEYPAD
983	DIESEL INJECTION COMPUTER SUPPLY RELAY
989	DISCHARGE BULB COMPUTER
997	LPG COMPUTER
1001	LPG TANK
1003	LPG OR PETROL SELECTOR SWITCH
1013	VARIABLE CAMSHAFT
1016	PASSENGER COMPARTMENT FUSE BOX
1017	AUTOMATIC TRANSMISSION TURBINE SPEED SENSOR
1019	EXCHANGER FLOW LOCK-UP SOLENOID VALVE
1023	AIR CONDITIONING FAN OUTPUT MODULE
1026	DRIVER'S SIDE AIR BAG
1027	PASSENGER'S SIDE AIR BAG
1028	DRIVER'S SIDE SATELLITE
1029	PASSENGER SIDE SATELLITE
1032	FUEL MANIFOLD PRESSURE SENSOR
1033	PROTECTED POSITIVE BATTERY
1040	WINDSCREEN WIPER RELAY
1042	CENTRAL DOOR LOCKING RELAY

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1043	ELECTRIC DOOR LOCKS UNLOCKING RELAY
1044	ONE-TOUCH ELECTRIC WINDOW RAISING RELAY
1045	ONE-TOUCH ELECTRIC WINDOW LOWERING RELAY
1050	CLUTCH SOLENOID VALVE
1051	ENGAGEMENT SOLENOID VALVE 1
1052	ENGAGEMENT SOLENOID VALVE 2
1053	SELECTION SOLENOID VALVE 1
1054	SELECTION SOLENOID VALVE 2
1055	ENGAGEMENT POSITION SENSOR
1056	SELECTION POSITION SENSOR
1057	CLUTCH POSITION SENSOR
1058	GEAR SELECTOR SWITCH
1059	SEQUENTIAL GEARBOX PRESSURE SENSOR
1060	GEARBOX INPUT SPEED SENSOR
1061	FUEL GAUGE RELAY
1066	FUEL TEMPERATURE SENSOR
1067	ADDITIONAL HEATING RELAY 1
1068	ADDITIONAL HEATING RELAY 2
1071	TURBOCHARGING PRESSURE SENSOR
1072	ADDITIONAL HEATER PLUG 2
1073	ADDITIONAL HEATER PLUG 3
1076	MOTORISED THROTTLE BODY
1077	CYLINDER 1 PENCIL COIL
1078	CYLINDER 2 PENCIL COIL
1079	CYLINDER 3 PENCIL COIL
1080	CYLINDER 4 PENCIL COIL 4
1081	CRUISE CONTROL LIMITER START STOP CONTROL
1091	DIAGONAL BRAKE 1 PRESSURE SENSOR
1094	ANTI-LOCK BRAKING SYSTEM/ELECTRONIC STABILITY PROGRAM COMPUTER
1105	FUEL FLOW ACTUATOR
1106	ESP ON/OFF BUTTON
1115	WEIGHT DISTRIBUTION MOTOR
1124	RAIN SENSOR COMPUTER
1125	CENTRAL COMMUNICATION UNIT
1127	VIDEO DISPLAY
1130	DRIVER'S FRONT SEAT POSITION SENSOR
1146	CAPTEUR TEMPERATURE GAZ REFRIGERANT
1156	PASSENGER COMPARTMENT FAN ASSEMBLY 1
1161	LPG SOLENOID VALVE RELAY
1168	FRONT ELECTRIC WINDOW CLOSER ONE-TOUCH DUAL CONTROL
1170	FRONT ONE-TOUCH WINDOW CLOSER DUAL CONTROL
1175	ESP SENSOR AND TRANSVERSE AND LATERAL ACCELERATION
1186	LIQUEFIED PETROLEUM GAS EXPANSION VALVE SOLENOID VALVE.
1195	LPG PRESSURE SENSOR
1196	LPG PETROL PUMP CUT-OFF RELAY
1202	COOLANT GAS PRESSURE SENSOR
1212	INJECTOR 1
1213	INJECTOR 2
1214	INJECTOR 3
1215	INJECTOR 4
1249	DRIVER'S ADAPTIVE FRONT AIR BAG
1253	UPSTREAM MAINS GAS SENSOR
1254	GAS RESERVOIR SOLENOID VALVE 1

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
1255	GAS RESERVOIR SOLENOID VALVE 2
1256	GAS RESERVOIR SOLENOID VALVE 3
1259	GAS SOLENOID VALVE SENSOR
1269	SUNROOF TRAVEL END CONTACT
1270	SUNROOF RELAY
1272	CD CHANGER
1273	VIDEO CONTROL COMPUTER
1278	REAR VIDEO SCREEN
1302	BLOWN AIR TEMPERATURE SENSOR
1324	CENTRAL REGISTRATION PLATE LIGHTING
1338	HEADLIGHT WASHER PUMP RELAY 2
1441	PASSENGER AIR BAG DISABLING KEY
1457	LPG TANK RELAY
1474	PRESSURE / AIR TEMPERATURE SENSOR
1512	DRIVER'S FRONT TWIN ELECTRIC WINDOWS CONTROL